Roadranger Warranty Repair Guideline

RWRG0046 - Idle Rattle Symptom(s)

Idle rattle

Cause

Idle rattle or neutral rattle is noise at idle caused by fluctuations of flywheel speed resulting inspeed variations at the inputshaft. This condition can cause the internal gearing to contactboth the drive side and coast side, creating a continuous noise. This idle rattle noise can be identified by slowly raising the en-gine RPMs, usually between 700 and 1000 RPMs, the noisewill diminish or be eliminated. Idle rattle is not a componentdamaging condition, however it can be very annoying to theoperator as it does create a very abnormal noise. Idle rattle canbe identified by partially releasing the clutch to see if the noisegoes away.

Repair Guideline

Refer to Service Bulletin CLIB0001

Date: October 18, 2005 **Updated:** April 29, 2013

Idle rattle complaints are not the result of defective transmis-sions or the factory-installed master clutch. If an idle rattlecomplaint is encountered, the complaint may be resolved byreplacing the original front and rear discs with the VCT Plus PDdiscs only. There is no need to replace the intermediate plateor pressure plate, unless damage or wear requires.

Warranty Statement

This is not a warrantable failure.